



Quick Reference Guide

Nurit 8000 Series (Application POS 4.80 or higher) RETAIL & RESTAURANT

Terminal Help Desk
1-800-228-0210

Customer Service
1-866-597-5721

Voice Authorization
1-800-228-1122

Supply Desk
1-855-295-8500

Credit Card Purchase	
PROMPT	ACTION
IDLE PROMPT	Swipe card or key card number [ENTER].
EXP DATE: MMY (IF MANUAL)	Key expiration date [ENTER].
AMOUNT	Key amount of the sale [ENTER].
CARD PRESENT	Press [ENTER] if the card is present. Press [MENU] if the card is not present.
ADDRESS	Key the first 5 digits before the first letter of the customer's billing address [ENTER].
ZIP CODE	Key customer's zip code [ENTER].
ENTER *CVV CODE	Key CVV Code [ENTER].
ORDER #	Key order number [ENTER].
SERVER ID	Key Server ID [ENTER].
TIP (3 OPTIONS)	Key tip then [ENTER] or [ENTER] to bypass. (Tips can be added later for restaurant)
SIGNATURE	Have customer sign receipt.
TEAR SLIP	Press any key to print second receipt.
*CVV Code is often requested for manually entered transactions. This code can be found on the back of the card as the last 3 digits on the right side of the signature panel, directly below the magnetic stripe.	

Debit Card Purchase	
PROMPT	ACTION
IDLE PROMPT	Press [ENTER] for DEBIT prompt.
DEBIT	Swipe card.
AMOUNT	Key amount of the sale [ENTER].
TIP (3 OPTIONS)	Key tip [ENTER] or [ENTER] to bypass. (Tips can be added later for restaurant)
CASH BACK	Key cash back amount [ENTER] or [ENTER] to bypass.
SERVER ID	Key server ID [ENTER].
PIN	Have customer enter their PIN [ENTER].
TEAR SLIP	Press any key to print second receipt.

Forced Sale (Prior Authorization Required)	
PROMPT	ACTION
IDLE PROMPT	Press up arrow key to FORCE prompt.
FORCE SALE	Swipe card or key card number [ENTER].
EXP DATE: MMY (IF MANUAL)	Key expiration date [ENTER].
AMOUNT	Key amount of the sale [ENTER].
AUTH #	Key authorization number obtained through voice auth or auth only [ENTER].
REFERENCE #	Key reference # on auth only receipt and [ENTER] or [ENTER] to bypass.
DATE	Key date of original auth [ENTER]. Example: 0131 (Jan 31)
TEAR SLIP	Press any key to print second receipt.

Reprint Receipt	
PROMPT	ACTION
IDLE PROMPT	Press [ALPHA] key. Key password.
RECEIPT MENU	Press [1] to print last customer receipt; Press [2] to print any receipt; Press [3] to print last merchant receipt
TRANSACTION #	Key the transaction number [ENTER].
NOT AVAILABLE	The last receipt is not available to print. A cancelled or decline transaction can void this function.

Settlement (Close Batch)	
PROMPT	ACTION
IDLE PROMPT	Press [F] key for the FUNCTION menu.
FUNCTION MENU	Press [2] to start the batch process.
Terminal will dial out and settle the batch. Once finished, a batch report will print out.	

NOTE: SOME PROMPTS MAY VARY BASED ON THE TERMINAL SETUP.

Nurit 8000 Series (Application POS 4.80 or higher) RETAIL & RESTAURANT

Quick Reference Guide

NOTE: SOME PROMPTS MAY VARY BASED ON THE TERMINAL SETUP.

Void — Credit Card	
PROMPT	ACTION
IDLE PROMPT	Press down arrow key to VOID prompt.
VOID	Swipe card or key card number [ENTER] .
EXP DATE: MMY (IF MANUAL)	Key expiration date [ENTER] .
AMOUNT	Key amount of the sale [ENTER] .
TEAR SLIP	Press any key to print second receipt.
NOTE: Batched transactions cannot be voided, they must be returned. Debit transactions cannot be voided.	

General Functions	
PROMPT	ACTION
POWER ON	Press and hold [ON/OFF] key for about five seconds.
POWER OFF	Press [F] key & [ON/OFF] at same time.
PRINT REPORT	Press [F] key followed by [1] key.
LIGHTEN SCREEN CONTRAST	Hold [F] key and tap the down arrow key.
DARKEN SCREEN CONTRAST	Hold [F] key and tap the up arrow key.
FEED PAPER	Hold down [F] key while tapping [ENTER]

Add / Edit Tips (Restaurant)	
PROMPT	ACTION
IDLE PROMPT	Press [F] and [MENU] at the same time.
TAB MENU	Press [1] key to add tips.
ADD TIPS MENU*	Press the number that corresponds with the desired access method.
1 ST TRANSACTION	To add a tip to this transaction or to edit an existing tip, [ENTER] . Bypass & show next transaction, press down arrow key.
TIP ENTRY	Key tip amount [ENTER] .
NEXT TRANS INFO	Enter/edit tips or bypass as necessary. If last trans was tipped, terminal returns to Add Tips Menu. If last transaction should not be tipped, press [MENU] to return to Add Tips Menu.
ADD TIPS MENU	Press [MENU] to exit.
*Tips can be added via [4] By Server #, [5] By Transaction #, [6] By Card Type and [7] By Card #. If one of these options is chosen, all transactions, tipped and untipped are displayed.	

Return — Credit Card / Debit Card	
PROMPT	ACTION
IDLE PROMPT	Press down arrow key to RETURN prompt.
RETURN PROMPT	Swipe card or key card number [ENTER] .
EXP DATE: MMY (IF MANUAL)	Key expiration date [ENTER] .
AMOUNT	Key amount of the sale [ENTER] .
AUTH #	Key authorization number from the original receipt [ENTER] .
SIGNATURE OR PIN	Have customer sign receipt or enter PIN [ENTER] .
TEAR SLIP	Press any key to print second receipt.

Open Tab (Restaurant)	
PROMPT	ACTION
IDLE PROMPT	Press [F] and [MENU] at the same time.
TAB MENU	Press [2] key to open a tab.
TAB LIMIT	The default max tab amount is displayed. Press [ENTER] to accept the amount or [MENU] to change the amount.
ENTER TAB AMOUNT	Enter the new tab amount [ENTER] .
SWIPE CARD	Swipe card or key card number [ENTER] .
EXP DATE: MMY (IF MANUAL)	Key expiration date [ENTER] .
SIGNATURE	Have customer sign receipt.

Close Tab (Restaurant)	
PROMPT	ACTION
IDLE PROMPT	Press [F] and [MENU] at the same time.
TAB MENU	Press [3] key to close a tab.
CLOSE TAB MENU	Press the number that corresponds with the desired access method. Example: [5] key for Transaction #.
TRANSACTION #	Key transaction number [ENTER] .
TRANSACTION INFO	Press [ENTER] .
TAB ENTRY	Enter the total tab amount [ENTER] .
TIP ENTRY	Enter the tip amount [ENTER] .